


Photo Patterning of DuPont Fodel Metal

APPLICATIONS
NOTE #702



*Fodel Interconnects on
Ceramic Substrate*

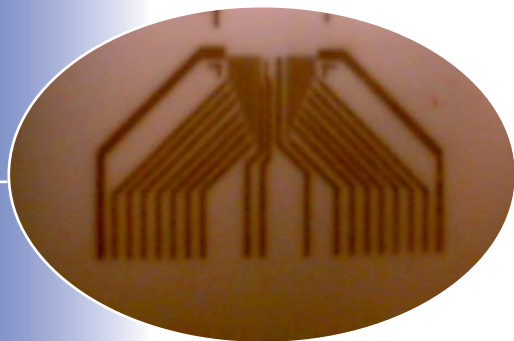

*Metal Fodel
Interconnects Patterned
on the SF-100 (60X)*



*Metal Fodel
Interconnects Patterned
on the SF-100 (200X)*

Overview:

Demonstration of patterning of DuPont Fodel on the SF-100.

Process Flow:

1. Start with a ceramic substrate.
2. Apply thin coating of DuPont Fodel.
3. Exposure of material using the SF-100.
4. Develop Fodel material using standard developer solution.
5. High temperature metal annealing.



INTELLIGENT
MICRO PATTERNING, LLC